 
 


7. Press [Function C] button when confirmed the minute setting, entering into setting of week.




Function C

8. When the week period flashes,press [Up] or [Down] to select Su, Mo, Tu, We, Th, Fr, Sa, Mo–Fr, Sa–Su any of the week priod.

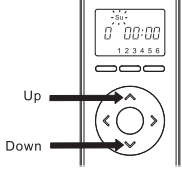


Up  
Down

9. Press [Function C] button again when confirmed the week, entering into selection channel.




Function C

10. Press [Up] or [Down] to select the channel.  
Note: only be allowed to use one channel.

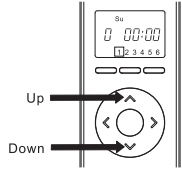 

 
 



Up  
Down

11. Press [Function C] botton when confirmed the channel selection, entering into setting.

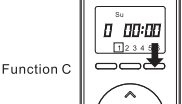


Function C

12.The screen shows up & down symbols , [Up] is , [Down] as .  
Note: cancel the timing symbol as , please refer to, 《cancel timing of setting》to get more details.

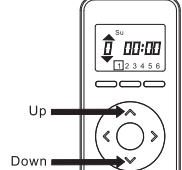

Up  
Down


13. Time, week, channel, setting had confirmed, please press [Stop] to confirm, timing setting is finished.  
Note: A setting process, if press [Stop], these current setting will be saved and exit setting status.  
B the setting is invalid if you do not press [Stop] to confirm the operation.

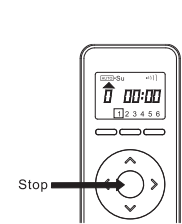

Stop


Cancel timing setting

1. Entering into timting seting, please double press [ Function A] button.

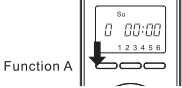


Function A

2. Press [Up] or [Down] to select the timing of require cancel.

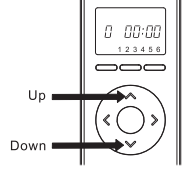


Up  
Down

3. Press [Function C] again, entering into week setting.

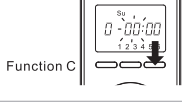


Function C

4. Press [Function C] again, enter into setting of minuter.

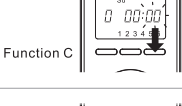


Function C

5. Press [Function C] again, entering into period setting.




Function C

6. Press [Function C ]again, entering into the selection of channel.







Function C

7. Press [Function C] again, entering into setting.

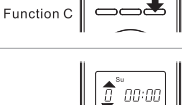


Function C

   8. Up  or down  symbol blinking, press [Up] or [Down] to adjust till to the symbol on .

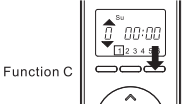


Function C

9. Press [Stop] to confirme, the current timing will be canceled.  
Note: In the process of timing cancel if press [Stop] that the current setting will automatically save, and the timing is still effective.

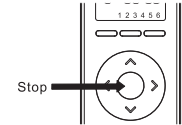


Stop

Replace batterr illustration

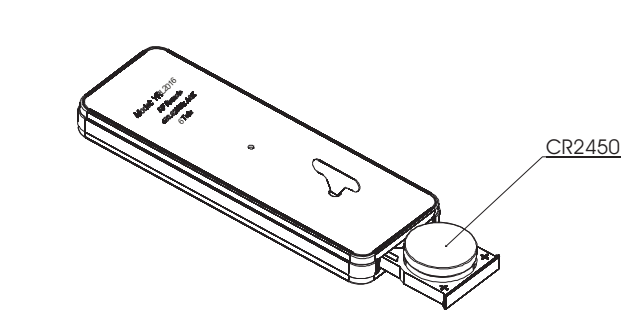

Product specification

Model	YRL2016
Transmission range	30m
Transmission frequency	433.92MHz±75KHz
Modulation mode	ASK
Battery	CR2450×1PC
Remote channel	6channels

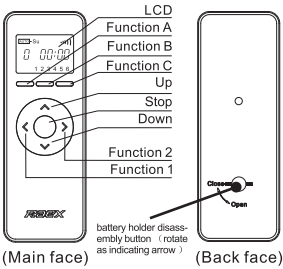

Functions Of Buttons

[Up] [Stop] [Down] respectively transmit the position up, stop & down signals under the channel was selected.

[Function A] in setting the time and timing, please refer to 《Time setting》 & 《Timing setting》 to get more details.


[Function B] [Function C] can switch channels by [left] and [right]. [Function C] also can use on time setting and timing seting, please refer to 《Time setting》 and 《Timing setting》 get more details.

[Channel Setting] button is only used to set remote channels, please refer to 《Remote control setting》.

[Function 1] & [Function 2] are used as intermediate stop functions for opening and closing curtains, applicable for venetian blind, roller blind be provided with tilting function. Other system with relevant function. Please refer to 《product instruction manual》 for more details.

Combination functions

Combination buttons will transmit function signals as below:

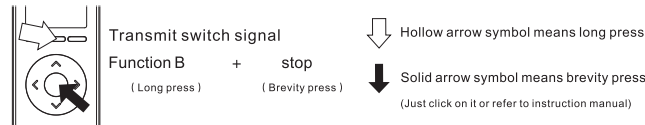

★Attention

- 1.Combine buttons is effective only with receiver of correspond functions.
- 2.Make use of the combine buttons function should be selected the current channel transmit.
- 3.The setting and methods will be a little different if combined to use with different receivers for details please refer to instructions manual.

	Transmit signal to change direnction		Transmit signal to delete limit
	Transmit setting to set upper position		Transmit signal to set lower position
	Transmit signal to set position1		Transmit signal to set intermediate position2 for setting
	Transmit signal to use touch control		Transmit signal to cancel touch control
	Transmit signal to switch external modes		

Remote control setting

Basic remote control setting

Before using the remote control function, the user must perform "Set remote channel" operation, in order to store the remote control channel into the controller. as soon as the motor receives remote control signal, it will act in response as setting.


If you need to make remote control channel invalid, you can perform the "Delete remote channel" operation.

When the rotating direction of motor is not same as the desired direction, you can do "Change the direction" operation for correcting it only by working with the transmitter.


Matching with drapery motors system setting and usage information and procedures as below:

◆Remote control channel settings


①Enter into setting codes status

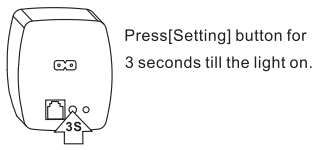


②Choose channels

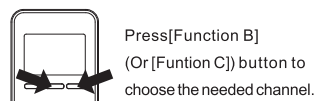

③Send the current channel code

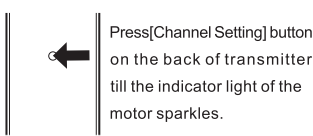


④Confirmation

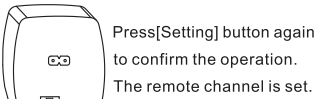


◆Delete remote control channels

①Enter into setting codes status

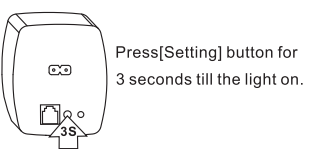


②Delete remote control channels

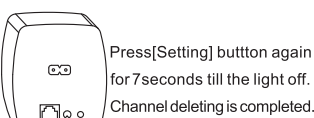


◆Change direction setting

①Enter into setting codes status

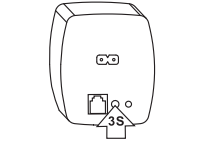


Press[Setting] button for 3 seconds till the light on.

② Transmit reversing signal

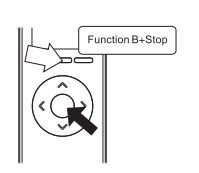


Press [Function B], without relasing, and press [Stop] button once, the motor receives the signal, the light is flashing.

③Confirmation

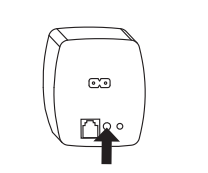


Press[Setting] button again to confirm the operation. The remote channel is set.

Time setting

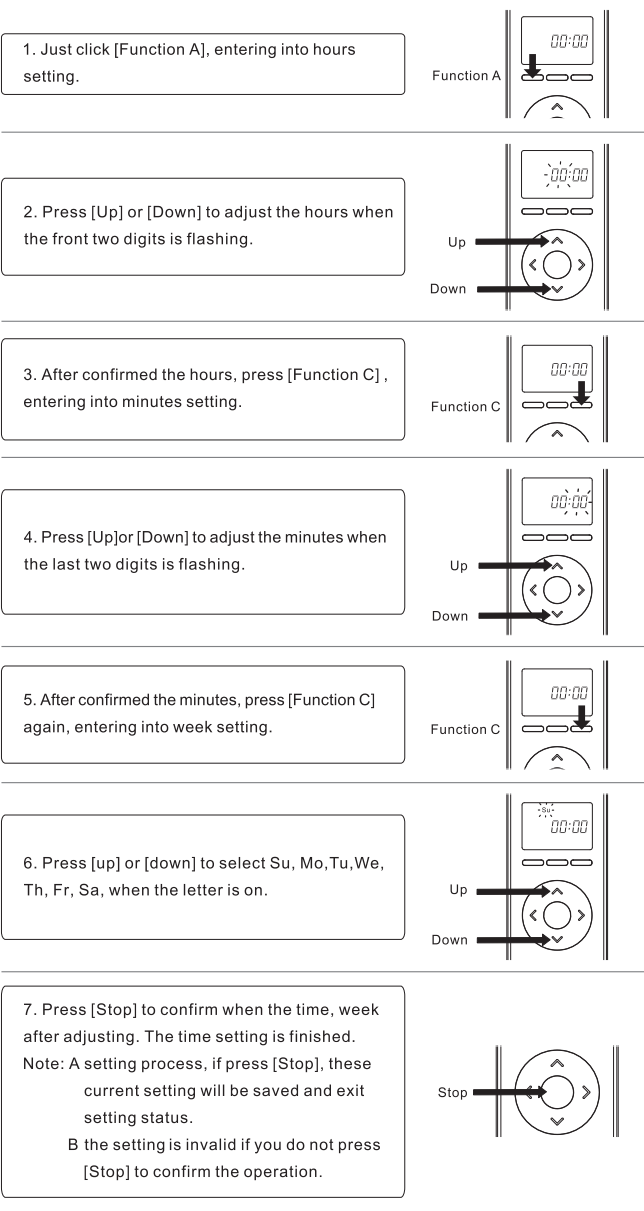

Timing setting

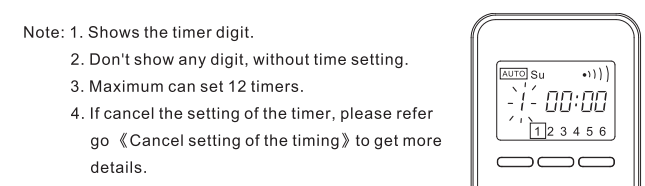

Step of timer setting

